

Polytron® 5000/8000

 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
en Assembly instructions
US Polytron® 5000/8000
de Montageanleitung
Polytron® 5000/8000
fr Notice de montage
Polytron® 5000/8000
es Instrucciones de montaje
Polytron® 5000/8000
ru Инструкция по сборке
Polytron® 5000/8000
zh 安裝說明
Polytron® 5000/8000
tr Montaj ve kurulum kılavuzu
Polytron® 5000/8000
ko 조립 지침
Polytron® 5000/8000
ja 組立説明書
Polytron® 5000/8000

Manufacturer
Dräger Safety AG & Co. KGaA
Revalstraße 1
D-23660 Lübeck
Germany
+49 451 8 82-0
4544288 – fUJ 4683.601 me
© Dräger Safety AG & Co. KGaA
Edition: 7 – 2019-09 (Edition: 1 – 2011-03)

Subject to alteration
www.draeger.com

Approval nomenclature
Polytron 5100 (Type ETR 022) / ETR 031
Polytron 5200 CAT / Polytron 8310 IR (Type XTR 022*, XTR 031*)
Polytron 8700 IR (Type ETR 042*, ITR 031*)
Polytron 8700 IR (Type ETR 044*, ETR 051*)
Polytron 8200 CAT / Polytron 8310 IR (Type XTR 044*, XTR 051*)
Polytron 8700 UGLD (Type XTR 044*, XTR 051*)
Polytron 8900 UGLD (Type ETR 0520)

Enclosure and PCB unit grounding
Polytron 5000



Wiring Polytron 5000

2-wire installation (Polytron 5100 EC)

