

Dräger Alcotest® 7000 Alcohol Screening Device

The Dräger Alcotest® 7000 sets new standards in breath alcohol testing. Its benefits include a wider temperature- and measuring range, low maintenance requirements and various networking options. In addition, the device can perform active alcohol tests via a mouthpiece and passive tests via a funnel. Reliable alcohol tests have never been so fast, simple and efficient. AS3547:2019 certified.



Benefits

Only one calibration per year

Typically alcohol testing devices have to be calibrated every six months. Thanks to its exceptional measurement stability, the Dräger Alcotest® 7000 only needs calibrating every 12 months. As a result, you only have to collect, send off and then re-issue your alcohol testers once a year. This saves time and, above all, money.

Two measurement methods in one device

Alongside the classic test using a mouthpiece, with the Alcotest 7000 you can also carry out tests using a funnel attachment. This enables you to complete a large number of alcohol tests in a very short span of time: time-saving, cost-effective and hygienic. The funnel-based test gives you an initial indication as to whether or not alcohol is present in the subject's breath. If the answer is yes, you simply press a button to switch over to the mouthpiece-based test mode. The following test then shows you the actual level of alcohol in the subject's breath.

Wide temperature range

With the Alcotest 7000 you can take reliable measurements even in extreme temperatures. The alcohol tester's patented heating system and high-quality materials ensure dependable results in temperatures ranging from -10 °C to +55 °C.

Network-connected solutions

The built-in Bluetooth® Low Energy technology offers you energy-saving, digital connectivity for the device and its data. This has many advantages: For example, the wireless connection of the alcohol tester to the Dräger BT Mobile Printer enables you to print out test results from a distance of up to 15 meters.

In addition, our software solution "Dräger add" facilitates a range of processes - e.g. the documentation of the measuring data on site.

Dräger's Service Connect software enables you to download measurement data and much more. You can also connect the Alcotest 7000 directly to a computer with a USB-C cable to read out just the test results.

High alcohol-detection limits

The increased performance capacity of the Alcotest 7000 also includes its measurement range. The maximum blood-alcohol limit that can be set with this alcohol testing device is as high as 0.600 g/210L. If this measurement range limit is exceeded, the display will tell you.

Benefits

The Alcotest Hygiene Plus

Hygiene is an increasingly important part of our everyday lives. Dräger Alcotest breath-alcohol detection devices use non-invasive measuring technologies with a high degree of hygiene – for the user as well as the test subject – thanks to the following features:

- During testing, the exhaled air is directed past rather than through the device
- There is a 90° angle between the user and the test subject during testing
- Disposable mouthpieces and funnel attachments are individually packaged
- Benefits of the Slide 'n' Click mouthpieces:
 - safe, hygienic distance between user and test subject
 - spacer prevents direct contact between lips and device
 - mouthpiece is easy to remove
 - the non-return valve prevents inhalation of air through mouthpiece
- Benefits of the replaceable funnel attachment:
 - no body contact with the test subject
 - blocks backflow of the test subject's own exhaled air, which prevents intake of potential pathogens from previous test subjects

Innovation born out of tradition


With more than 65 years of experience, Dräger is a market leader in the field of breath-alcohol testing. Law enforcement in many countries use devices from the Alcotest product series in everyday traffic monitoring. The Alcotest 7000 is manufactured in Germany and meets the highest quality standards.

Details



D-24153-2020

Mouthpiece receptacle can be mounted on left or right

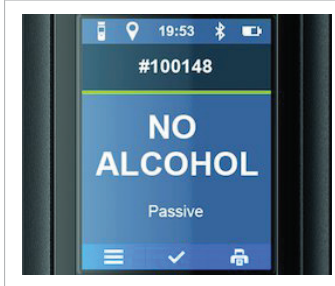

D-24151-2020

The 2.4" colour display provides information, notices and warnings



D-24144-2020

Fast switchover from funnel-based to mouthpiece-based testing



D-24152-2020

Simple push-button print function



D-24145-2020

USB-C Interface for easy charging of the lithium version (while stationary or on the move)



D-24147-2020

Rubberised handling area for a secure grip

Accessories




D-25372-2020

Dräger Mobile Printer BT

The Dräger Mobile Printer BT facilitates wireless printing from any compatible Dräger testing device within a 15-metre radius. You secure the small, lightweight mobile printer to your belt with a retaining clip. The OK key to switch the device on and off and the paper-feed button ensure ease of use. Illuminated symbols provide you with information about the status of the device.

Accessories

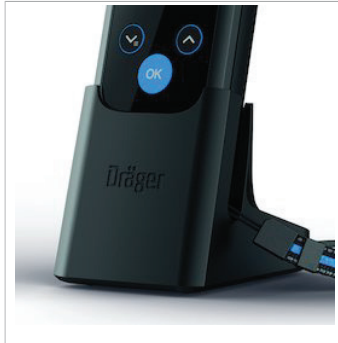

D-25676-2020

Alcotest 7000 charging station

The Alcotest 7000 charging station makes it easy to charge the lithiumion version as well as connect to a PC. The device's USB-C cable charges it. The charging station can be fixed in place as required.



D-30594-2017

Hygienic-Flow-Funnel

Package unit: 10 pieces, hygienically and individually packaged with air outlets to minimise back-flow of expired air



ST-178-2004

Mouthpieces (slide'n'click)

Available in packs of 100, 250, and 1,000 mouthpieces with or without non-return valve.



D-30157-2020

Software solution "Dräger add"

In addition, our software solution "Dräger add" facilitates a range of processes - e.g. the documentation of the measuring data on site.


Accessories



Protection options

To protect the device, Dräger offers device protection bags and various fabric storage bags and transport cases.

Services

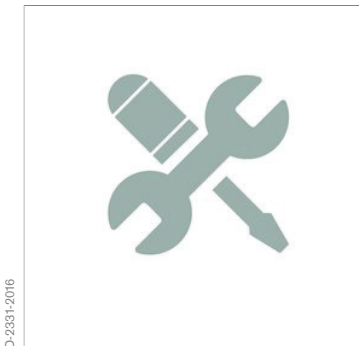

Product Service

Our product service provides support with different service packages – in our workshops or directly on your premises. Care, maintenance and servicing are crucial for safety and reliability – but careful maintenance and care are a must, even when it comes to commercial considerations. Preventive checks, ongoing care and use of original replacement parts improve the longevity of your investment.



Training

The Dräger Academy has shared its solid, practical knowledge for over 40 years. We hold more than 2,400 training courses each year, on a range of over 600 topics, with more than 110 authorised trainers. We equip your staff with practical knowledge and ensure that what they learn can be applied effectively, both day-to-day and, more importantly, whenever critical situations occur. We will be pleased to develop a customised training programme for you.

Services



D-2330-2016

Rental Service

From bridging a temporary shortage of equipment to procuring special equipment for applications involving specific requirements: If you only need to cover a temporary higher demand, then DrägerRental Service with over 65,000 pieces of rental equipment is an economical alternative to purchasing. Fast, straightforward and with a wide range of additional services available upon request.



D-2329-2016

Shutdown Safety Service

In need of a comprehensive safety solution? Is there a long list of legal requirements you have to meet, and are you pressed for time? Balancing maximum efficiency with optimal security can pose major challenges. We can help you achieve that balance. Our Shutdown Safety Service is a solution that takes into account all the necessities of downtime and especially your individual requirements.



D-2332-2016

On-site Safety Service

Whether through a rental shop, personnel services or comprehensive safety management, our On-Site Safety Services provide support in all projects where there are particular safety risks – not to mention normal day-to-day business.

Related Products

D-31886-2020



Dräger Alcotest® 5000

The Dräger Alcotest® 5000 is a professional breath-alcohol tester which detects the presence of alcohol. The high-speed breathalyser lets you perform numerous tests in no time. Its special funnel reduces the back-flow of expired air to a minimum, preventing the risk of infection to subsequent test subjects.

D-32068-2020



Dräger Alcotest® 6000

The Dräger Alcotest® 6000 allows the professional user to perform a breath alcohol test with speed and precision. The measuring technology of this small and user-friendly portable measuring device has already been proven worldwide and has been sold over 1,000,000 times.

D-42702-2015



Dräger DrugCheck 3000

Use the Dräger DrugCheck 3000 to find out within minutes if a person recently consumed certain drugs. The compact and quick saliva (oral fluid) based drug test yields reliable results affordably and easily. The non-invasive drug test kit does not require electricity and can therefore be used anywhere.

D-54720-2012



Dräger DrugTest 5000

No pipetting, no drips, no timing: With the Dräger DrugTest 5000 a drug test is carried out simply and quickly. The collected saliva sample can be analyzed immediately – for accurate results on the spot.

Technical Data

Dräger Alcotest 7000

Detection basis	Electrochemical DrägerSensor®, 1/4" technology, alcohol-specific
Measurement range	Breath alcohol concentration: 0.000 to 0.600 g/210L; (Ethanol mass per minimum volume at 34 °C and 1,013 hPa) Visual signal when measuring limits are exceeded
Sample collection	Default: Automatic sample collection when minimum volume or predefined blowing time is reached; Passive sampling or manual triggering of sampling possible
Start-up time	Approx. 3 seconds after switching on (depending on configuration)
Display of test results	After approx. 3 seconds (at 0.000 g/210L) After approx. 10 seconds (at 0.100 g/210L, at room temperature)
Ambient operating conditions	-10 °C to +55 °C; 10 to 100 % relative humidity (non condensing); 600 to 1,300 hPa
Ambient conditions during storage	-20 °C to +60 °C; 15 to 75 % relative humidity (10 to 100% relative humidity <48 h); 600 to 1,300 hPa
Display	QVGA TFT colour display 320 x 240 2.4"
LEDs	tricolour LEDs to help display results and warning messages
Acoustic signals	Various signal tones to support display and warning messages
Memory	Storage of the last 10,000 tests
Energy supply	Lithium-Version rechargeable via USB-C connection Charge status shown in display; one charge is sufficient to perform or up to 5,000 breath tests (lithium version)
Mouthpiece receptacle	The Slide 'n' Click mouthpiece or Alcotest funnel mounts on either side
Mouthpiece	Hygienic, individually packaged with tamper-proof, unclosable air outlet Mouthpiece ejector and spacer between mouth and device housing
Funnel	Hygienic, individually packaged with air outlets for minimising back-flow of expired air
Operating design	Measuring functions can be performed with one key; Navigation in menu with two menu keys
Calibration	Wet gas or dry gas calibration; Recommended calibration interval of 12 months
Casing	Impact-resistant ASA/PC
Dimensions (W x H x D), Weight	61 mm x 172 mm x 36 mm; A7000 LI: 275 g
Vibration and impact resistance	EN 60068-2-27, EN 60068-2-6; EN 60068-2-64
CE mark	Electromagnetic compatibility
Standards	AS3547:2019, EN 15964, NHTSA, Australian Standard, FDA-conformity, depending on configuration
Internal clock	Warning or switch-off after expiry of calibration period (depending on configuration)
IP protection class	IP 54

Technical Data

Interface	USB-C
Bluetooth®	Bluetooth® Low Energy 5.0

Ordering Information

Dräger Alcotest 7000 – Standard configuration	37 00 400
Measuring device Lithium version with Bluetooth and with fixed built-in battery, 3 mouthpieces, wrist strap, USB-C cable, calibration certificate, no GPS, no NFC.	
Dräger Alcotest 7000 charging cradle	37 00 420
Dräger Mobile Printer BT	37 00 421
Mouthpieces – package of 100	68 10 690
Mouthpieces – package of 250	68 10 825
Mouthpieces – package of 1,000	68 10 830
Mouthpiece with non-return valve – package of 100	68 11 055
Mouthpiece with non-return valve – package of 250	68 11 060
Mouthpiece with non-return valve – package of 1,000	68 11 065
Hygienic-Flow-Funnel, package of 10; individually, hygienically packed	83 27 718

Not all products, features, or services are for sale in all countries.

Mentioned Trademarks are only registered in certain countries and not necessarily in the country in which this material is released. Go to www.draeger.com/trademarks to find the current status.

CORPORATE HEADQUARTERS

Drägerwerk AG & Co. KGaA
Moislinger Allee 53–55
23558 Lübeck, Germany

www.draeger.com

REGION EUROPE

Dräger Safety AG & Co. KGaA
Revalstraße 1
23560 Lübeck, Germany
Tel +49 451 882 0
Fax +49 451 882 2080
info@draeger.com

REGION ASIA PACIFIC

Draeger Singapore Pte. Ltd.
61 Science Park Road
The Galen #04-01
Singapore 117525
Tel +65 6872 9288
Fax +65 6259 0398

AUSTRALIA (HEAD OFFICE)

Draeger Australia Pty. Ltd.
8 Acacia Place
Notting Hill VIC 3168
Tel (Local Toll-free) 1800 372 437
Tel +61 3 9265 5000
customer.service@draeger.com

REGION MIDDLE EAST, AFRICA

Dräger Safety AG & Co. KGaA
Branch Office
P.O. Box 505108
Dubai, United Arab Emirates
Tel +971 4 4294 600
Fax +971 4 4294 699
contactuae@draeger.com

REGION CENTRAL

AND SOUTH AMERICA
Dräger Indústria e Comércio Ltda.
Al. Pucurui - 51 - Tamboré
06460-100 - Barueri - São Paulo
Tel. +55 (11) 4689-4900
relacionamento@draeger.com

Locate your Regional Sales
Representative at:
www.draeger.com/contact

