


Dräger Hygiene Plan

Cleaning and disinfection in the respiratory protection workshop

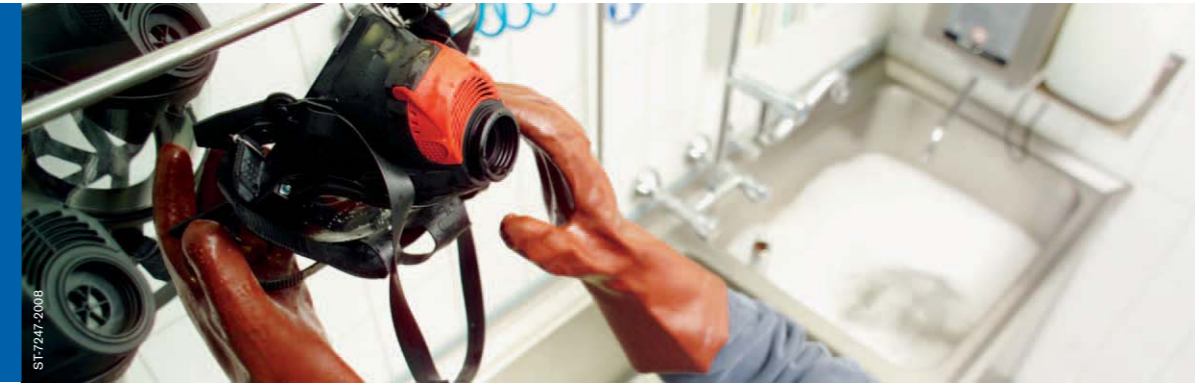

What	How	With What	Packaging	Order No.
PERSONAL HYGIENE				
Hands and skin	Cleaning hands	Liquid washing agent: Manisoft	24 x 500ml bottles	79 040 60
	Hand disinfection	Hand disinfecting agent: Skinman Soft 3ml / 30 sec	24 x 500ml bottles	79 040 53
	Hand care	Skin care agent: Silonda Silonda Lipid	24 x 500ml bottles 24 x 500ml bottles	79 040 54 79 040 55
Feet, shoes and socks	Dermatophyte prophylaxis	Disinfecting agent: Autoderm Extra Laudamonium	24 x 350ml bottles 6 liter can	79 040 56 79 040 64
RESPIRATORY PROTECTIVE MASKS, CHEMICAL PROTECTION SUITS AND ACCESSORIES				
Manual processing of respiratory protective masks and chemical protection suits	Manual cleaning before disinfection in immersion bath with brush or rag	Cleaning agent: Sekusept Cleaner 0.5 - 1.0% solution, warm tap water	4 x 2 liter container	79 040 71
	Manual disinfection in disinfection bath	Disinfecting agent: Incidur 2% / 15min, cold tap water	3 x 2 liter container 6 liter can 30 liter can	65 700 00 79 040 72 79 040 73
Accessories Rubber boots and gloves, contamination protective hoods and suits	Manual cleaning & disinfection (including rinsing and drying)	Disinfecting agent: Incidur 2% / 15 min, cold tap water	3 x 2 liter container 6 liter can 30 liter can	65 700 00 79 040 72 79 040 73
Manual disinfection for anthrax exciter Masks, CSA, etc.	Manual disinfection (Disinfection effect available, further use of the parts is not guaranteed)	Disinfecting agent: Peresal 5% / 15 min, cold tap water	6 liter can	79 040 57
Machine processing of respiratory protective masks and chemical protection suits	Machine cleaning & disinfection (including rinsing & drying) in a Dräger washing machine	Disinfecting agent with cleaning effect: Eltra 5g/l (DGHM), 20 min, at 60°C	20kg bag	79 040 74
Chemical protection suits	Machine cleaning, disinfection & drying in a CSA cabin DRTK	Disinfecting agent with cleaning effect: Sekumatic FDR 1% / 10 min, 2% / 5 min, at 50 to 55°C	3 x 5 liter container 20 liter can	79 040 58 79 040 59
TEST EQUIPMENT AND SURFACES				
Test head	Disinfection	Disinfecting agent: Incidur 2% / 15 min, cold tap water Incides N (ready-for-use cloths) Incides N refill pack	Container size, see footnote* 6 containers with 90 cloths 5 containers with 90 cloths	65 700 01 65 700 02
Work surfaces and objects	Larger surfaces & objects: Disinfection & cleaning by wiping	Surface disinfecting agent: Incidur 2% / 15 min, cold tap water	3 x 2 liter container 6 liter can 30 liter can	65 700 00 79 040 72 79 040 73
	Small, hard to access surfaces: Disinfection & cleaning by spraying	Surface disinfecting spray: Incidur Spray, undiluted / 1 min	12 x 1 liter bottles	79 040 65
Stainless steel surfaces	Smaller surfaces & objects: Disinfection & cleaning by wiping	Surface disinfecting agent: Incides N (ready-to-use cloths) Incides N refill pack	6 containers with 90 cloths 5 containers with 90 cloths	65 700 01 65 700 02
	cleaning stainless steel Stainless steel care	Stainless steel cleaner: Helios Stainless steel care: Chromol	6 x 500ml bottles 12 x 500ml bottles	79 040 69 79 040 70
Floors	Disinfection & cleaning by wiping	Surface disinfecting agent: Incidur 2% / 15 min, cold tap water	Container size, see footnote*	
Drying cabinet	Disinfection & cleaning by wiping	Surface disinfecting agent: Incidur 2% / 15 min, cold tap water	Container size, see footnote*	
PROTECTIVE CLOTHING				
Protective clothing	Machine cleaning	Detergent: Usona Liquid	20 liter can	79 040 66
	Machine cleaning	Detergent booster: (for clothing with deep soiling caused by fire smoke, oil and fat) Triplex Energie Plus	20 liter can	79 040 67
	Machine impregnation	Impregnent (fluorine carboxylic resin): Saprit Protect Plus	20 liter can	79 040 68

*3 x 2 liter container, order No.: 65 700 00, 6 liter can, order No.: 79 040 72, 30 liter can, order No.: 79 040 73

This hygiene plan is only a suggestion, and does not relieve the user from his duty to check validity and completeness. It must be consistently checked and revised.