

Anlegevorgang Dräger Oxy 3000/6000 MK II



D-50198-2009



D-50942-2015

Dräger Oxy 3000/6000 MKII



D-50949-2015

Ziehen Sie den Öffner hoch, bis die Spannbänder abfallen.



D-50961-2015

Nehmen Sie den Deckel ab.



D-50968-2015

Ziehen Sie das Gerät an der gelben Schlaufe aus dem Gehäuse.



D-50982-2015

Legen Sie das Nackenband um. Der Atembeutel zeigt nach vorne.



D-50989-2015

Ziehen Sie das Mundstück nach oben zum Gesicht und nehmen Sie es in den Mund.



D-50998-2015

Positionieren Sie die Nasenklammer auf der Nase.



D-51002-2015

Lösen Sie die Schutzbrille von der Knöpfflasche und setzen Sie sie auf.



D-51008-2015

Straffen Sie das Nackenband und positionieren Sie das Gerät vor der Brust.



D-51012-2015

Legen Sie das Brustband um, schließen Sie es und ziehen Sie es straff.



D-51023-2015

Nun können Sie sicher aus dem Gefahrenbereich flüchten.

Donning Procedure Dräger Oxy 3000/6000 MK II



Dräger Oxy 3000/6000 MKII



Pull up the opener until the tightening straps fall off.



Remove the top cover.



Grasp the yellow loop of the neck strap and pull the device out of the housing.



Don the neck strap. The breathing bag points away from your body.




Pull the mouthpiece towards your face and put it into your mouth.




Position the nose clip on your nose.



Release the goggles from the button strap and put them on.

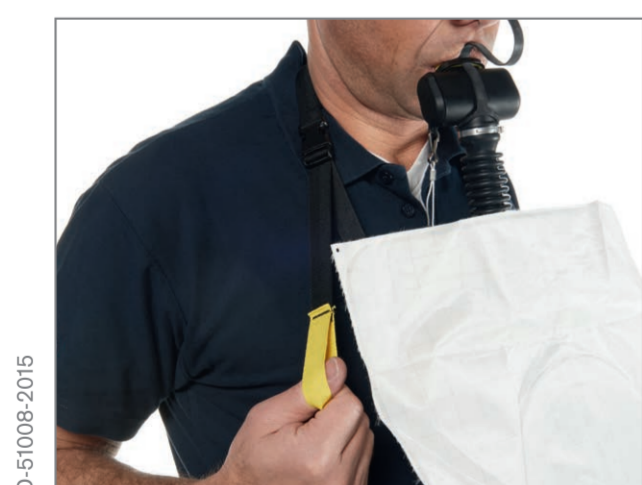

Fasten the neck strap to position the device in front of your chest.

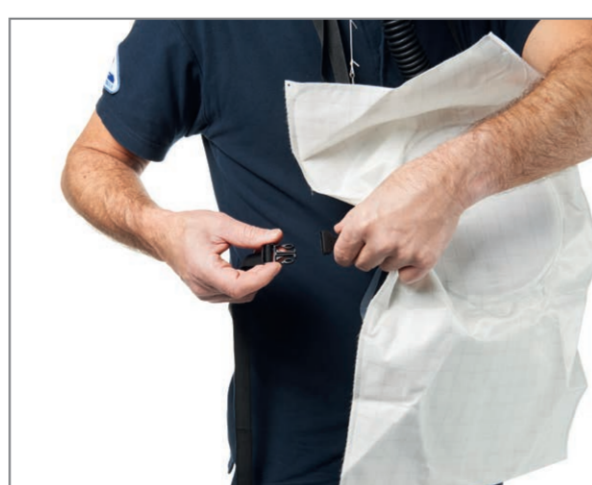

Put the chest strap around your chest. Then fix and fasten it.



Ready to escape.