

Activation of X-dock Manager Licenses

1 Introduction

For use of X-dock Manager a license is necessary after the trial period has ended. Activation is done by entering a license key (called "ticket ID"). The license key can be found on the invoice at the according position.

In the following activation is explained for online-systems (server offers Internet access) or offline-systems (server has missing internet access).

2 Online activation


After first start the license dialog will appear, offering different activation possibilities.

If trial license is selected, activation must be done using the normal menu structure of X-dock manager for licensing.

Online registration is fully automated but the server machine must offer an internet connection.



After selecting online registration, ticket ID must be entered:

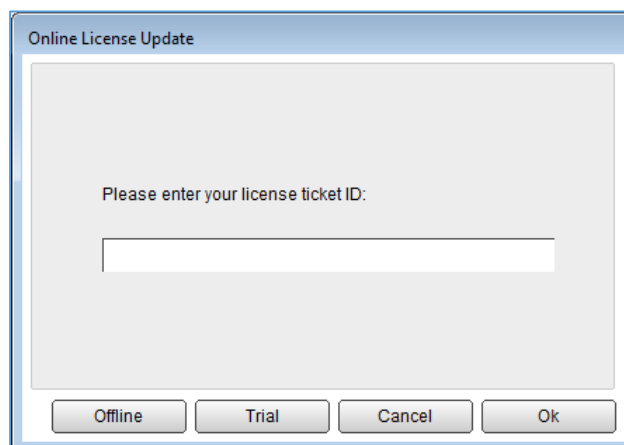

The software is now activated and can be used accordingly.

2.1 Offline activation



If not internet access is available on the server machine, offline activation must be used.

A request file will be created, which must be transferred to a web portal using a PC with internet access. This will result in one license file which can be imported into X-dock Manager.

Following this way „offline registration“ must be selected:




The license request file must now be generated and saved:

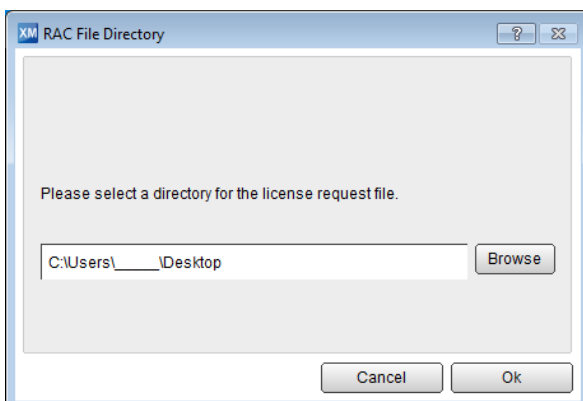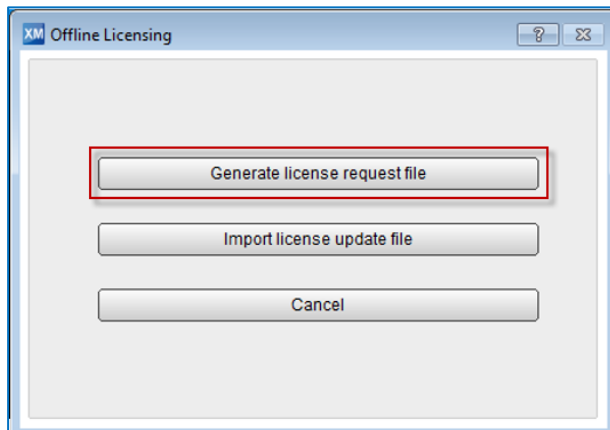


Afterwards the file must be transferred to one PC with internet access and following web page must be opened:


<http://licenses.draeger.com>

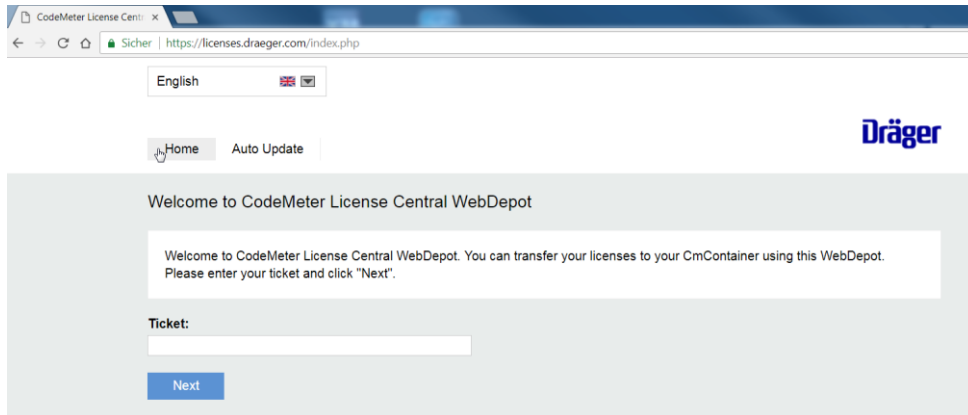

After entering the ticket ID, which can be found on the invoice, licenses will be shown:

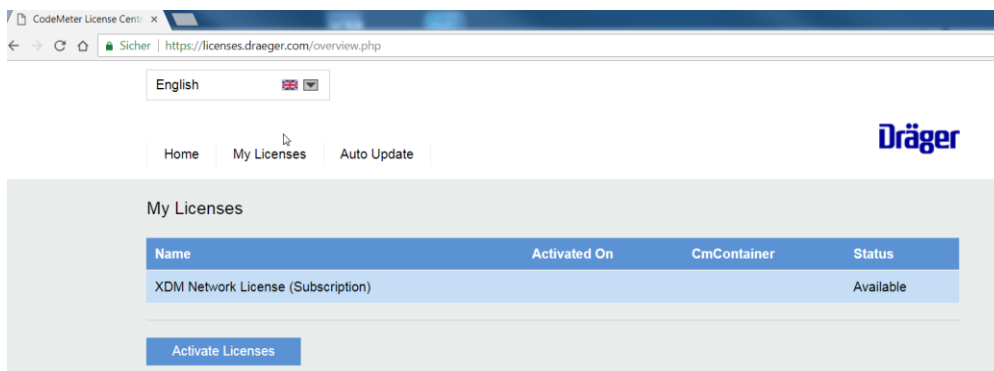

Activation of licenses must now be tried but it might fail. Afterwards offline activation can be selected:

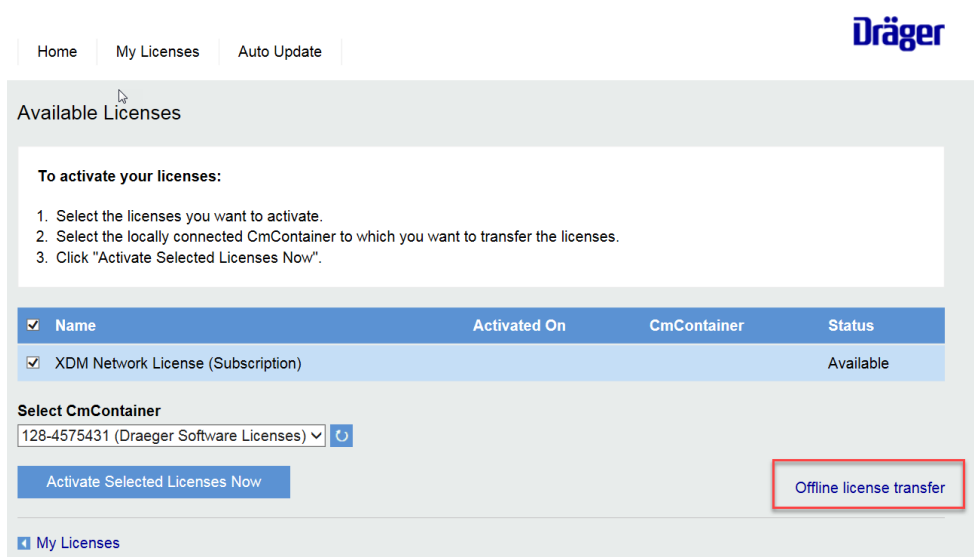

The activation file must be uploaded using the following dialog:

Available Licenses

Upload Request Download Update Upload Receipt

To activate your licenses offline - First step "Upload Request":

1. Create a license request file with Firm Code 5000332 for the CmContainer where you want to transfer the licenses to . This file can for example be created with CodeMeter Control Center. [How it works](#)
2. Select the licenses you want to activate.
3. Select the created license request file.
4. Click "Upload Request And Continue Now".

<input checked="" type="checkbox"/>	Name	Activated On	CmContainer	Status
<input checked="" type="checkbox"/>	XDM Network License (Subscription)			Available

Pick license request file (*.WibuCmRaC)

Durchsuchen...

Upload Request And Continue Now

[Online license transfer](#)

A license file will be offered and can be saved:

Download License Update File

Upload Request ✓ Download Update Upload Receipt

To transfer your licenses offline - Second step "Download Update":

1. Click "Download License Update File Now" and save the file on your computer.
2. Import this license update file to the CmContainer with Serial 128-4575431. This file can for example be imported with CodeMeter Control Center. [How it works](#)
3. After you have successfully transferred the license update file to the CmContainer, click "Next" to confirm the license transfer.


Download License Update File Now Next

[Online license transfer](#)


[My Licenses](#)

Upload of a receipt is not necessary.

The activation file can now be downloaded. It must be saved on a machine having X-dock Manager installed. Using the dialog "import license update file" must now be selected:

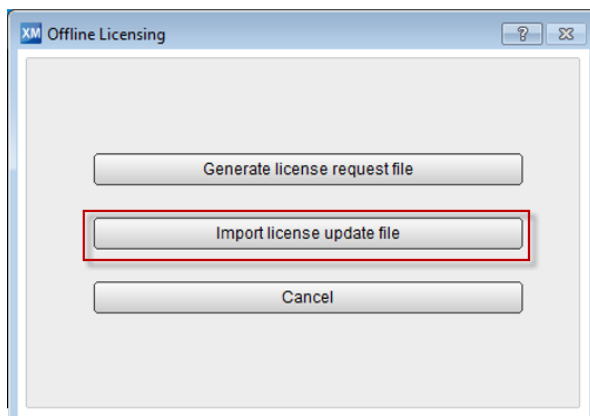

The dialog will appear:

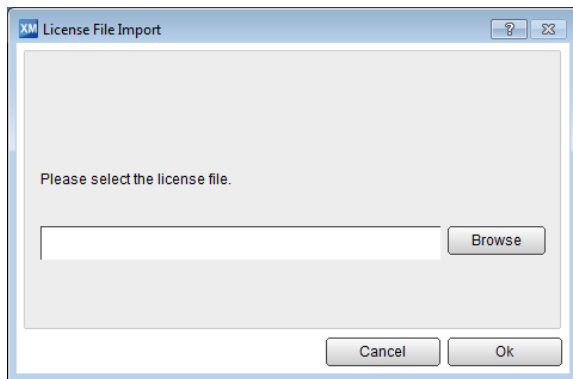

With this dialog the license can be set. Activation is done.

According to each license type run time might be limited. If the license gets invalid, some functions might be limited, installation of updates might not be supported or even the full use might be locked.

If a license-subscription is used, "online-systems" will extend their license automatically after a new invoice is sent.

Offline systems must perform activation again. The ticket ID will not change.