

# Dräger X-plore 8000

## Head Pieces Use

with Dräger X-plore 8x00 PAPR or  
Dräger X-plore 9x00/PAS X-plore Airline System

### 1.1 Use with helmet PC visor L1Z-L3T4 (with X-plore 8x00 or X-plore 9300)



Adjust the height and width of the headband using the four fastening points.



Connect the breathing hose to the helmet. Stretch the sealing cuff and put the helmet on.



Adjust the air outlet at the front of the helmet and the ratchet at the back to the desired position.



Pull the sealing cuff under your chin and tighten the strap.

### 1.2 Use with helmet PC visor HL1 (with X-plore 8x00 and X-plore 9300)



Adjust the height and width of the headband using the four fastening points.



Connect the breathing hose. Stretch the sealing cuff and put the helmet on.



Use the ratchet at the back to adjust it to the desired position. Make sure that the cuff seals properly around the neck and tighten the strap.



Fold up the visor to adjust the air outlet. Close the visor and pull the sealing cuff under your chin.

### 1.3 Use with helmet or bump cap for hood (with X-plore 8x00 or X-plore 9300)



Pull the hood over the helmet shell/ bump cap so that the front is facing the visor of the hood.



Pull the hood over the hose connection.



Hook the visor flaps onto the mounting clip of the head protection.



See instructions under 1.1. Put on the head piece and insert the inner bib into the protective clothing.

### 1.4 Use with hood (with X-plore 8x00 or X-plore 9300)



Adjust the head circumference and head height with the support ring. Connect the breathing hose.



Put on the hood using the fitting loops.



With the long hood, you can tuck the bottom layer of the bib into the protective clothing.

# Dräger X-plore 8000

## Head Pieces Use

with Dräger X-plore 8x00 PAPR or  
Dräger X-plore 9x00/PAS X-plore Airline System

### 1.5 Use with face shield (with X-plore 8x00 or X-plore 9300)



Adjust the headband to your head circumference.



If necessary, adjust the distance between the head shell and the headband.



Connect the breathing hose. Put on the face shield. Use the ratchet at the back to adjust it to the desired position.



Fold up the visor to adjust the air outlet. Close the visor and pull the sealing cuff under your chin.

### 1.6 Use with full-face mask (with X-plore 8x00, PAS X-plore or X-plore 9500\*)



Connect the breathing hose<sup>1</sup>. Open the straps as far as possible and place your chin in the chin mould of the mask.




Fit the harness over the head until the mask is in position.




Tighten both neck straps, temple straps and, if necessary, front strap.

### 1.7 Use with half mask (with X-plore 8x00)

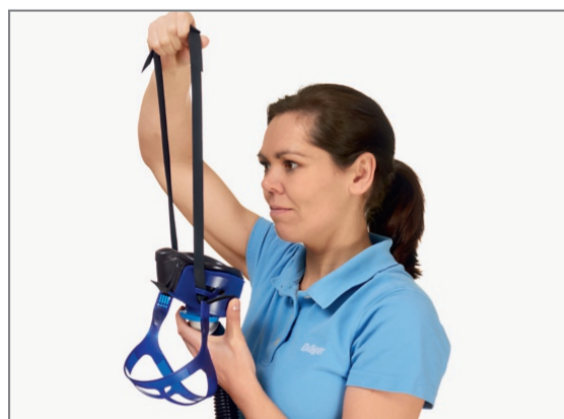

Connect the mask with the breathing hose<sup>1</sup>. Close the fastening hooks of the neck strap and place it at the back of your neck.

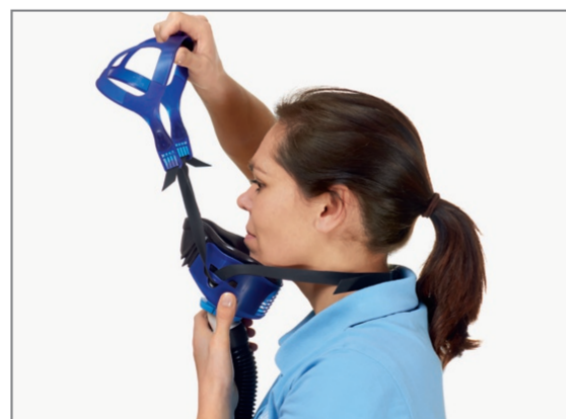

Position the face piece over the mouth and nose and pull the head cradle over the head.



Pull the straps uniformly until the mask fits securely and comfortably.

<sup>1</sup> When using the Dräger PAS X-plore with full-face mask, an LDV breathing hose is required.  
When using the Dräger X-plore 9500 in combination with a full-face mask, an adaptor is required.