


# Dräger ViewPro 7000 Software

Dräger ViewPro 7000 is a visualisation software for data management and graphic representation of your Dräger REGARD® 7000 control system. Plant overviews, tables, alarm messages and diagrams provide an overview of measured values, and the statuses of gas warning systems. The software is simple to operate using touch functions and gesture commands.

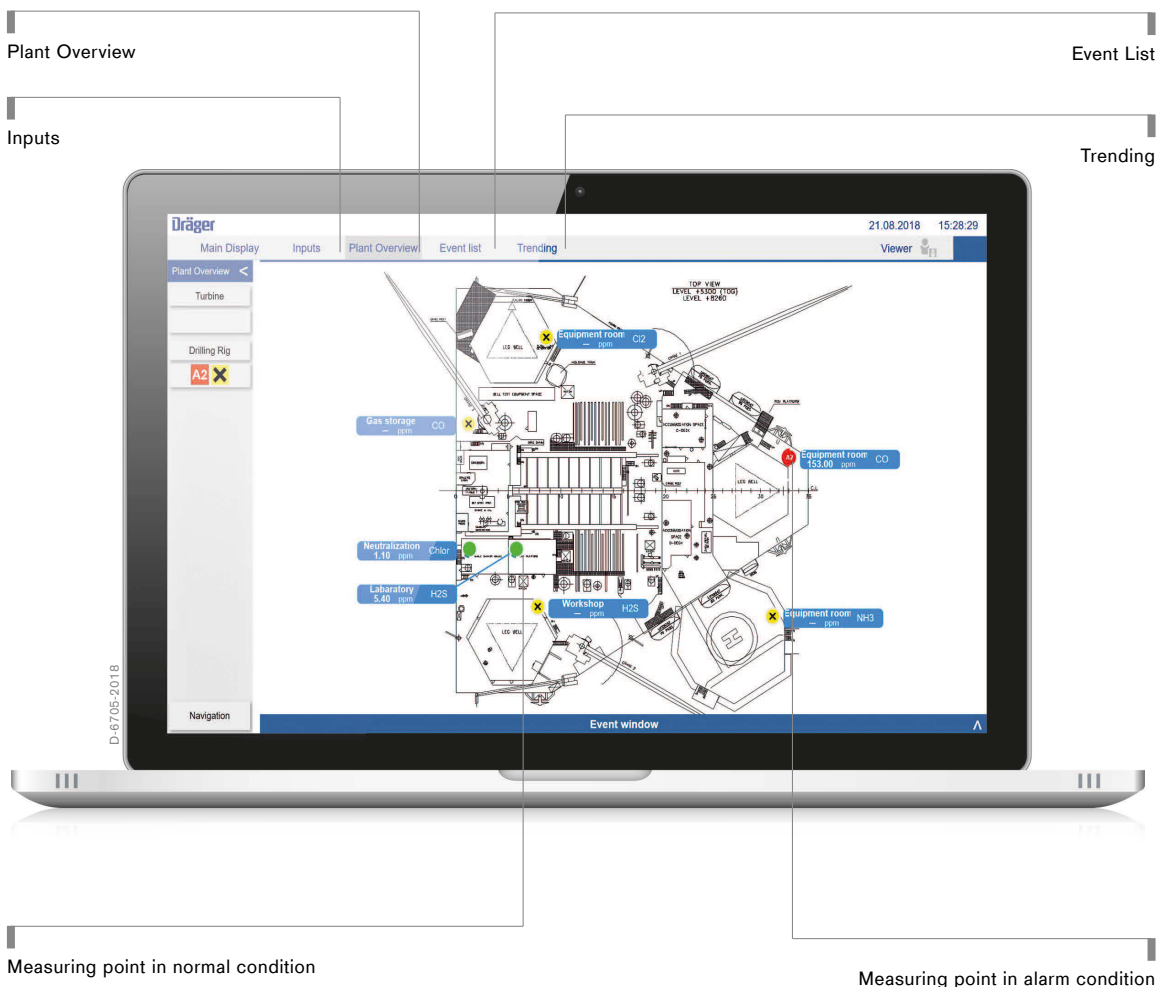

## Benefits

---

### Visualisation of the Dräger REGARD® 7000 control system

Dräger ViewPro 7000 visualisation software is used with a touch panel PC. This is connected to the Dräger REGARD 7000 control system via a Modbus RTU interface. The software shows the channels of the REGARD 7000 in different views. Up to 1,536 channels can be displayed. You can easily and intuitively control the software using the touch function.

---

### Plant representation

We incorporate your plant pictures into the Dräger ViewPro 7000, creating a highly realistic depiction of your plant. Accordingly, the gas transmitters are displayed at their positions within the plant. You can view them individually or in groups. Additionally, live data such as the alarm status (gas alarm: off, confirmed, unconfirmed) or detection status (calibration, alarm lock, outage) is displayed. Up to 50 plant pictures can be incorporated.

---

### Trend analysis graphics

The trend analysis shows you the progress of measured values for a selected REGARD 7000 channel in a single diagram. This shows you the gas concentrations for a measuring point over the last 365 days. You can also choose between viewing large time periods (like entire months) or just specific hours.

---

### Event logger and event list

Dräger ViewPro 7000 saves all events, status information and measured values from the input channels for a period of up to 365 days. If you need to, you can retrieve an event list in which the date, time and status of the channels are logged. This list can be saved and printed out for documentation purposes.

---

### Web server

ViewPro 7000's optional web server function enables you to use the visualisation on additional PCs too. Simply access the application via a web browser and use the software as usual. In addition to the web server, the visualisation can be accessed by up to three clients at the same time.

---

### Message control

ViewPro 7000's optional message control sends e-mail or SMS notifications (such as alarm notifications or system information) to individual recipients. Based on your configuration, the messages can be escalated within a group of recipients. That means the next recipient in line will be alerted until someone answers. Shift management in ViewPro 7000 enables you to maintain an efficient chain of communication during an incident because notifications are only sent to persons who are available and on active duty.

## Precise follow-up with trend analysis



D-6706-2018

The trend analysis gives you a review into the history of measured values and alarms of a measuring point.

## System Components



D-6806-2016

### Dräger REGARD® 7000

The Dräger REGARD® 7000 is a modular and therefore highly expandable analysis system for monitoring various gases and vapours. Suitable for gas warning systems with various levels of complexity and numbers of transmitters, the Dräger REGARD® 7000 also features exceptional reliability and efficiency. An additional benefit is the backward compatibility with the REGARD®.

## System Components



D-5944-2016

### Dräger REGARD® 7000 Modbus RTU Gateway Set

The REGARD® 7000 Modbus RTU Gateway Set allows the transfer of all kinds of data via a Modbus RTU interface to overarching systems like the Dräger ViewPro 7000, a distributed control system (DCS) or a supervisory control and data acquisition (SCADA) system.

## Accessories



D-7837-2018

### Web server

The web server brings your Dräger ViewPro 7000 1:1 to the intranet or internet. The web client provides the same “look & feel” and functionality as the Viewpro 7000. In addition to the instance on the web server, up to three completely independent instances of the web client can be started at the same time. The call of the web client is generally not bound to firmly defined PCs.



D-7896-2018

### Touch panel PC

The touch panel PC enables you to use the Dräger ViewPro 7000 via gesture commands. Windows 10 Professional is installed.

## Ordering Information

Dräger ViewPro 7000, for 25 channels and 4 plant overviews, incl. Modbus driver und activation dongle	SC 07025
Dräger ViewPro 7000, for 50 channels and 8 plant overviews, incl. Modbus driver and activation dongle	SC 07050
Dräger ViewPro 7000, for 100 channels and 12 plant overviews, incl. Modbus driver and activation dongle	SC 07100
Dräger ViewPro 7000, for 200 channels and 20 plant overviews, incl. Modbus driver and activation dongle	SC 07200
Dräger ViewPro 7000, for 400 channels and 30 plant overviews, incl. Modbus driver and activation dongle	SC 07400
Dräger ViewPro 7000, for 1,536 channels and 50 plant overviews, incl. Modbus driver and activation dongle	SC 07999
Message control	SC 07002
Web server (3 clients)	SC 07003
Message control/web server	SC 07004
Touch panel PC running Windows 10 Professional	upon request

## Notes

Not all products, features, or services are for sale in all countries.  
Mentioned Trademarks are only registered in certain countries and not necessarily in the country in which this material is released. Go to [www.draeger.com/trademarks](http://www.draeger.com/trademarks) to find the current status.

**CORPORATE HEADQUARTERS**  
Drägerwerk AG & Co. KGaA  
Moislinger Allee 53–55  
23558 Lübeck, Germany

[www.draeger.com](http://www.draeger.com)

**REGION DACH**  
Dräger Safety AG & Co. KGaA  
Revalstraße 1  
23560 Lübeck, Germany  
Tel +49 451 882 0  
Fax +49 451 882 2080  
[info@draeger.com](mailto:info@draeger.com)

**REGION EUROPE**  
Dräger Safety AG & Co. KGaA  
Revalstraße 1  
23560 Lübeck, Germany  
Tel +49 451 882 0  
Fax +49 451 882 2080  
[info@draeger.com](mailto:info@draeger.com)

**REGION MIDDLE EAST, AFRICA**  
Dräger Safety AG & Co. KGaA  
Branch Office  
P.O. Box 505108  
Dubai, United Arab Emirates  
Tel +971 4 4294 600  
Fax +971 4 4294 699  
[contactuae@draeger.com](mailto:contactuae@draeger.com)

**REGION ASIA PACIFIC**  
Dräger Singapore Pte. Ltd.  
25 International Business Park  
#04-20/21 German Centre  
Singapore 609916  
Tel +65 6308 9400  
Fax +65 6308 9401  
[asia.pacific@draeger.com](mailto:asia.pacific@draeger.com)

**REGION CENTRAL  
AND SOUTH AMERICA**  
Dräger Panama S. de R.L.  
59 East Street, Nuevo Paitilla  
House 30, San Francisco Town  
Panama City, Panama  
Tel +507 377 9100  
Fax +507 377 9130  
[servicioalcliente@draeger.com](mailto:servicioalcliente@draeger.com)

Locate your Regional Sales  
Representative at:  
[www.draeger.com/contact](http://www.draeger.com/contact)

