

# Dräger REGIS® 300

## Inngångskontroll for brannkonstabler

---

Monitoring of respiratory protection of emergency and rescue teams: The board REGIS® 300 enables the incident manager to keep track of respiratory equipment wearers and their deployment time. Thanks to an automatic intermediate alarm, monitoring can be combined with other tasks.

# Highlights

## **Simultaneous monitoring of three teams**

With Dräger REGIS, the incident commander is able to monitor up to three teams simultaneously, with up to three wearers per team. Easy to read displays with countdown timers inform about the remaining deployment time. The display is illuminated with the touch of a button to ensure all important data is easy to see even in difficult conditions.

## **More safety with intermediate alarms**

A continuous beep is emitted once the deployment time of a team is over. To aid with assigning the right alarm with the right team, the corresponding LED flashes. The acoustic and visual alarm tracer also emits an alert after 1/3 and 2/3 of the deployment time has expired.

## **Full deployment monitoring with simple documentation**

Name of the equipment wearer, cylinder pressure at the beginning of the deployment, air supply, start and end of deployment time, as well as location: A clip attached to the board holds a sheet for entering all necessary data. The person performing the monitoring can later detach and file this sheet as needed. Name tags can be attached with snap hooks to the lower end of the board for help in visualizing the team members. The color of the tags also provides information about the type of respirators used.

## **Other advantages of the REGIS 300**


- Three backlit displays
- Digital clock for real-time display
- Customisable deployment time
- Deployment time with negative sign starting at 0 minutes on display
- Made from durable plastic
- Corner protectors made of rubber
- Labeling field with intuitive symbols
- Clip to hold sheets and pen

# Connective Products



## Dräger PSS AirBoss

- High-performance self-contained breathing apparatus for firefighting
- Offers best in class ergonomics and is one of the lightest weight breathing apparatus on the market
- Available in three standard configurations
- Compatible with Dräger FireGround

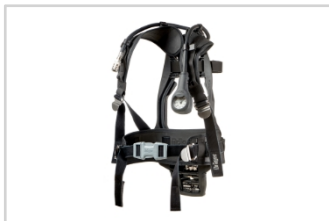

## Dräger PSS® 3000

- Self-contained breathing apparatus for basic applications in Industry and Fire Services
- Combines comfort with exceptional pneumatic performance



## Dräger PSS® 4000

- Professional self-contained breathing apparatus for firefighting
- Offers comfort, stability, lightweight and advanced harness materials for extended wear

Ikke alle produkter, funksjoner eller tjenester er til salgs i alle land. Varemerker som er nevnt her, tilhører sine respektive eiere. Varemerker kan være eid av Drägerwerk AG & Co. KGaA (Dräger) eller dets tilknyttede selskaper i visse land, og ikke nødvendigvis i det landet hvor dette materialet er utgitt. Besøk [www.draeger.com/trademarks](http://www.draeger.com/trademarks) for å se den aktuelle statusen for Drägers varemerker.

### **Dräger Norge AS**

Innspurten 9, 0663 Oslo  
Tel: +47 23 65 38 00

### **Corporate Headquarters**

#### **Drägerwerk AG & Co. KGaA**

Moislinger Allee 53-55  
23558 Lübeck  
Germany

