



Dräger Panorama Nova Full Face Mask

The Panorama Nova full face mask series sets benchmark for protection, sealing, and quality. Proven globally for decades, this full face mask stands for reliability in protecting both the respiratory system and the eyes.

Dräger Panorama Nova



Large visor (180° angle)

Optimal view during a wide range of tasks.
Made from Polycarbonate (optionally also with coating) or Triplex.

Robust connection

Offers compatibility and secure application with SCBA and airline systems or even Rd40 filters.

5-point head harness / adapter

Simple and easy donning and doffing.
Also available with Supra adapter for use as mask-helmet-combination.

Comfortable and secure fit

Double sealing frame with threefold sealing edges.
More secure protection and tight fit for all face shapes.

Benefits

The right solution for every application

Working with hazardous materials places high demands on both people and equipment. The Panorama Nova full face mask provides reliable protection in a variety of situations: In combination with a self-contained breathing apparatus or airline system, it enables safe, independent breathing regardless of the surrounding atmosphere. Alternatively, when the contaminants are known and sufficient oxygen is present, the Panorama Nova used with the Dräger filter program offers dependable filtration and protection. This flexibility makes the Panorama Nova a robust and safe solution for different applications.

Secure fit and wearing comfort

The mask body of the Panorama Nova is made from EPDM or silicone which is especially gentle on skin. It remains flexible at both high and low temperatures. Its double sealing frame and triple sealing edges provide a secure but comfortable fit for almost all face shapes. Thanks to the universal size, logistics and storage are greatly simplified. Alternatively, the Panorama Nova is also available with Supra adapters for use as mask-helmet-combination with helmets of the Dräger HPS series.

Wide field of vision even during prolonged use

The distortion-free visor is optionally made of impact resistant polycarbonate or of chemical-resistant triplex. The 180° wide angle offers a nearly unrestricted field of view. The intelligent ventilation system ensures a fog-free visor.

Diverse accessories and easy maintenance

The wide range of accessories turns the Panorama Nova into a versatile application device. The high-quality materials of the Panorama Nova are easy to clean and maintain. Its high-quality workmanship ensures a long service life and thus long-term cost savings.

System Components


D-7469-2010



Dräger PSS 3000

The Dräger PSS 3000 is a high performing breathing apparatus for firefighters. Combining comfort with exceptional pneumatic performance, it is designed for applications where simplicity and ease of use are key essentials. Lightweight yet robust, and easy to don, this advanced breathing apparatus provides dependable breathing protection.


D-38071-2015

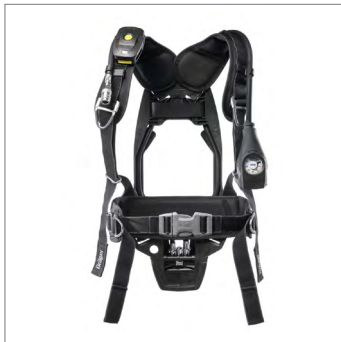

Dräger PSS 4000

The Dräger PSS 4000 is one of the lightest professional self-contained breathing apparatus for firefighters. Combining comfort with exceptional pneumatic performance, this SCBA is designed for applications where simplicity and ease of use are crucial. Lightweight yet robust, and easy to don, the PSS 4000 provides outstanding breathing protection.

D-1625-2021

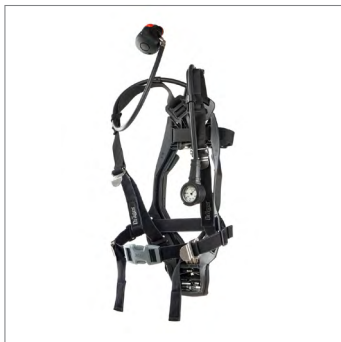

Dräger PAS Lite

For use in industrial applications where a simple, robust and easy to use breathing apparatus is required, the Dräger PAS Lite Self-Contained Breathing Apparatus (SCBA) combines reliability with comfort and performance, as well as excellent service life and easy maintenance.

D-21187-2009



Dräger PAS AirPack 1

The Dräger PAS AirPack 1 is the ideal solution for long-term work in critical working environments. With its robust steel frame construction, proven pneumatic system and integrated hose reel, the Dräger PAS AirPack 1 is a complete solution for supplying breathing air to up to two people.

System Components

D-2244-2022



Dräger HPS 7000

The multipurpose Dräger HPS 7000 firefighter's helmet is in a class of its own, thanks to its innovative, sporty and dynamic design, ergonomic fit and components which make it a multifunctional system solution. It provides optimum protection during every operation.

D-12657-2014



Dräger Prestor 5000

The Prestor 5000 from Dräger is a highly efficient device that tests the integrity and thus safety of full-face respiratory masks. The automatic testing program reduces the time needed to inspect each mask, which makes the testing of even a large number of masks fast and convenient.

Accessories

D-7582-2011



Wikov V mask box

Instead of a mask bag, the Dräger full face masks can be stored or carried along in the Wikov V mask box.

ST-414-2003



Protex mask bag

Instead of a carrying box, the Dräger full face masks can be stored in the "Protex" mask bag.

D-44729-2015



DAISYquick cleaning cloths

Cleaning cloths to remove dirt easily.

D-9356-2014



Spectacles Frame Panorama Nova / X-plore

For people who wear glasses, the Dräger full face masks can easily be equipped with a spectacles kit.

Accessories



D-5990-2018

"klar-pilot" gel

Anti-fogging agent which can additionally be applied to reduce possible fogging on the insider of the visor.

Technical Data

Mask body	EPDM or silicone
Visor	Impact-resistant polycarbonate or heat and chemical-resistant triplex glass
Front port	Robust plastic with inhalation and exhalation valve
	RA – round threaded connector Rd40 mm x 1/7" acc. to EN 148-1
	PE – threaded connector used by German Fire Service, M45 x 3 acc. to EN 148-3
	ESA – plug-in connector of German Fire Service acc. to DIN 58600
	P – Dräger plug-in connect
Weight	approx. 550 g – 650 g (depending on variant)
Tested and approved to	EN136 CL3+ (CE mark), DIN 58610, vfdb, NIOSH, AS/NZS (depending on variant)

Ordering Information

FRONT PORT	MATERIAL	VISOR	VISOR FRAME	ADAPTATION	PART NUMBER
RA					
	EPDM	PC	Stainless steel	EPDM	R52850
	Silicone	PC	Stainless steel	Silicone	R52855
	EPDM	PC	Plastic (red)	EPDM	R54990
PE					
	EPDM	PC	Stainless steel	EPDM	R51492
	EPDM	PC	Plastic (red)	EPDM	R54720
	EPDM	Triplex	Stainless steel	EPDM	R51792
ESA					
	EPDM	PC	Stainless steel	EPDM	R55001
	EPDM	Triplex	Stainless steel	EPDM	R55004

Ordering Information

P

EPDM	PC	Stainless steel	EPDM	R52972
EPDM	PC	Plastic (red)	EPDM	R54450
EPDM	Triplex	Stainless steel	EPDM	R52992
Silicone	PC	Stainless steel	Silicone	R53070
EPDM	PC	Stainless steel	Supra	R51853

* Additional variants also available. Please get in touch with your respective contact person for more information.

EPDM = ethylene propylene diene monomer mixture

PC = polycarbonate

Supra = adapter for mask-helmet-combination

Not all products, features, or services are for sale in all countries. Trademarks mentioned herein are the property of its respective owner. Trademarks may be owned by Drägerwerk AG & Co. KGaA (Dräger) or its affiliates in certain countries and not necessarily in the country in which this material is released. Visit www.draeger.com/trademarks for the current status of Dräger's trademarks.

Corporate Headquarters

Drägerwerk AG & Co. KGaA
Moislinger Allee 53–55
23558 Lübeck, Germany
■ www.draeger.com

Region Europe

Dräger Safety AG & Co. KGaA
Revalstraße 1
23560 Lübeck, Germany
☎ +49 451 882 0
☎ +49 451 882 2080
✉ info@draeger.com

Region Asia Pacific

Draeger Singapore Pte. Ltd.
61 Science Park Road
The Galen #04-01
Singapore 117525
☎ +65 6872 9288
☎ +65 6259 0398

Region Middle East, Africa

Dräger Safety AG & Co. KGaA
Branch Office
P.O. Box 505108
Dubai, United Arab Emirates
☎ +971 4 4294 600
☎ +971 4 4294 699
✉ contactuae@draeger.com

Region Central and South America

Dräger Safety do Brasil Ltda.
Al. Pucuruí, 51/61 – Tamboré
06460-100 Barueri, São Paulo
☎ +55 (11) 4689-4900
✉ relacionamento@draeger.com



Locate your Regional Sales
Representative at:
www.draeger.com/contact