


Dräger Short-Term Tubes

Dräger-Tubes

Tried and tested a million times: Worldwide, the Dräger Short-Term Tubes have proven to be a very cost-effective and reliable method for the measurement of gases. Decreasing occupational exposure values, special customer requirements and new legal regulations made it necessary to develop even more sensitive Dräger-Tubes.

Dräger Short-Term Tubes

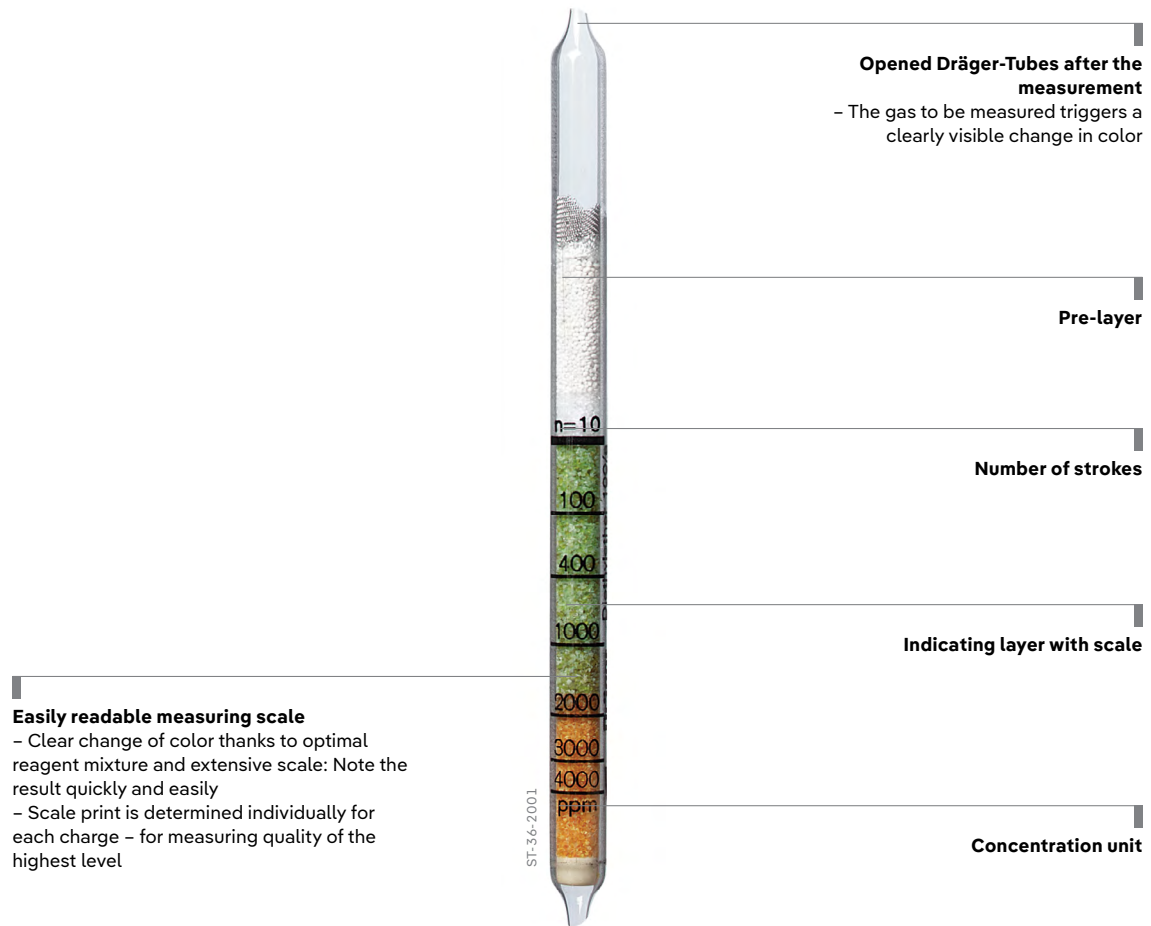

Benefits

Quick and targeted measurements

For spot measurement more than 500 different gases can be detected. The measurement usually takes between 5 seconds and 15 minutes. Furthermore, the easy-to-use Dräger-Tubes have already been calibrated and form a complementary unit with the Dräger-Tube pumps.

Easy handling

The Short-Term Tubes are used either manually with the Dräger-Tube pump accuro or automatically with the Dräger X-act 5000. The results can then be read directly at the end of the measurement process.

Fields of application

- air examinations at the workplace in the range of legal limit values
- technical gas analysis in the areas of emission concentrations / immission concentrations
- measurements of compressed air / compressed gases

Flexible use

A large number of different gases and vapors can be measured by the Short-Term Tubes. These tubes are used e.g. for the determination of concentration peaks, the measurement of exposures in the inhalation area, the determination of possible leakages as well as for the analysis of air in sewers, shafts, tanks or other confined spaces.

System Components

D-19328-2009



Dräger accuro

Fast measurement with one hand: The Dräger-Tube pump accuro allows you to use the established Dräger-Tubes to take measurements under extreme conditions. The easy-to-use Dräger-Tubes have already been calibrated and form a perfect unit with the Dräger-Tube pump.

D-6654-2009



Dräger Aerotest Alpha

The Dräger Aerotest Alpha is the instrument of choice for monitoring the purity of breathing air in the low pressure range. In combination with the Dräger Oil Impactor, the system achieves an unprecedented quality of breathing air monitoring.

D-5762-2022



Dräger Aerotest SimultanTest CO₂

The Dräger SimultanTest CO₂ allows the purity of carbonic acid to be measured in the 3 bar low pressure range.

D-5715-2022



Dräger Aerotest Simultan HP

Dräger Aerotest Simultan HP is used to determine the quality of respiratory air in high-pressure applications. In combination with the new Dräger Oil Impactor the system offers a unique quality level for the monitoring of compressed air.

Accessories

ST-1990-2005



Dräger TO 7000

By using the tube opener Dräger TO 7000, conventional Short-Term Tubes as well as Ampoule and Double Tubes can be opened with only simple movements and no jagged edges are left behind.

D-13066-2010



Hot air probe

Enables the measurement of extremely hot gases, e.g. in combustion plants.

D-13069-2010



Bar probe 400

Is used for clearance measurements in containers.

ST-14319-2008



Dräger accuro extension hoses

For use in hard-to-access locations such as shafts.

Available in the following sizes:

- 1 m
- 3 m
- 10 m
- 15 m

Not all products, features, or services are for sale in all countries. Trademarks mentioned herein are the property of its respective owner. Trademarks may be owned by Drägerwerk AG & Co. KGaA (Dräger) or its affiliates in certain countries and not necessarily in the country in which this material is released. Visit www.draeger.com/trademarks for the current status of Dräger's trademarks.

Corporate Headquarters

Drägerwerk AG & Co. KGaA
Moislinger Allee 53–55
23558 Lübeck, Germany
■ www.draeger.com

Region Europe

Dräger Safety AG & Co. KGaA

Revalstraße 1
23560 Lübeck, Germany
☎ +49 451 882 0
☎ +49 451 882 2080
✉ info@draeger.com

Region Asia Pacific

Dräger Singapore Pte. Ltd.

61 Science Park Road
The Galen #04-01
Singapore 117525
☎ +65 6872 9288
☎ +65 6259 0398

Region Middle East, Africa

Dräger Safety AG & Co. KGaA

Branch Office
P.O. Box 505108
Dubai, United Arab Emirates
☎ +971 4 4294 600
☎ +971 4 4294 699
✉ contactuae@draeger.com

Region Central and South America

Dräger Safety do Brasil Ltda.

Al. Pucuruí, 51/61 – Tamboré
06460-100 Barueri, São Paulo Brasil
☎ +55 (11) 4689-4900
✉ relacionamento@draeger.com



Locate your Regional Sales Representative at:
www.draeger.com/contact