

## Dräger FPS®-COM 5000 Start-up and use

Because there is no time for misunderstandings in an emergency:  
The Dräger FPS®-COM 5000 communication system ensures clear communication through a voice amplifier unit or radio device. Even under extreme conditions like underground mines rescue, closed-circuit- and self-contained breathing apparatus users rely on our communication system to focus on their mission.



### 1 Donning the mask

Place the respiratory protection full-face mask over your face, covering both mouth and nose. If necessary, put on a fire protection hood. The earpiece sits over the fire protection hood. Wear the helmet over both hood and mask.




### 5 Communication within the team

You communicate to surrounding colleagues via the voice amplifier. This enables the team members to have their hands free. Communication runs through the radio when you press the push-to-talk button.




### 2 Switching on the device

Press the ON/OFF switch/button for approx. 1 second. You will then hear and see the communications unit's readiness and operating status.

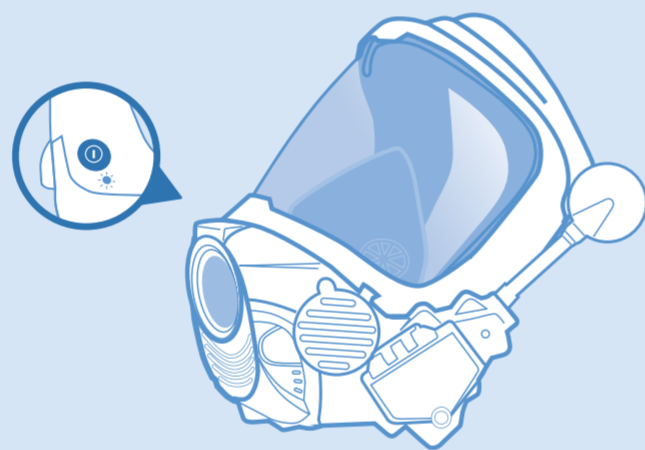

### 6 Communication between command centre and several teams

Team leaders communicate via the push-to-talk button with the command centre. Check that the radio is ready, in the correct channel and follow communication behavior guidelines.

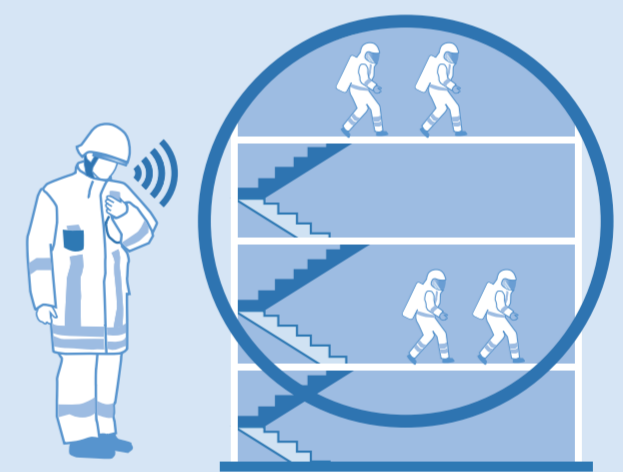


### 3 Function test: Voice amplification

When you speak into the mask, the voice is amplified instantly via the external loudspeakers and enables clear communication with people in close proximity. Different interfaces also allow communication through radio.



### 7 After Use

Switch off the communications unit using the ON/OFF button. After 10 minutes of inactivity, the unit powers down. When you speak into the mask, power down halts.

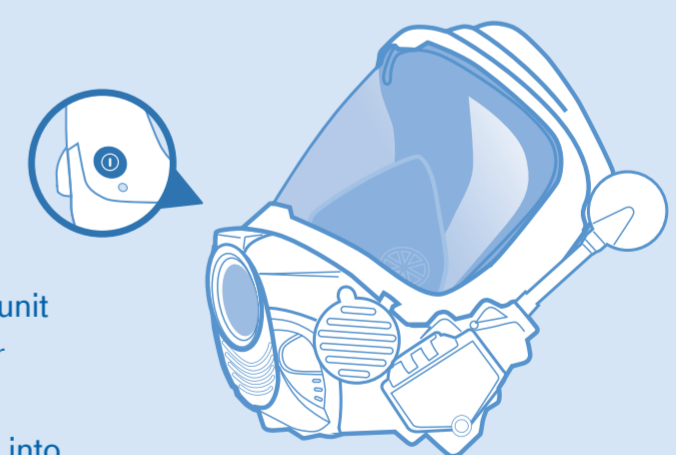

### 4 Function test: Connection to radio

Switch on the radio and perform the function test by pushing the push-to-talk button.



### 8 Cleaning

Cleaning the mask manually does not require disassembling the communications unit. For thorough cleaning, we recommend to disassemble the communication units from the respiratory protection mask and clean it with a solution of lukewarm water and e.g. Sekusept® cleaner using a soft cloth. For further information please refer to the instructions for use.

