

Accessories

Dräger Polytron 5100



IR Connection Kit 45 44 197

To connect PC to communicate with Transmitters.



Magnetic Wand 45 44 101

Tool for calibration / adjustment of the gas transmitter.



Gasing Adapter 68 06 978

Preferably this gassing adapter is intended to be used for calibration of catalytic bead sensors, but also can serve as simple by-pass adapter in sampling systems (recommended flow: 0.5 liters/min).
Material: PE (polyethylene, max. ambient temperature 70 °C).



Pole Mount Kit Polytron 5xx0/8xx0 45 44 198

To fit transmitter onto ducts or pipes.



Docking Station/ E-Box Power 68 12 275

Necessary for Enhanced Safety installations with relay/ remote function.



Calibration Adapter Viton 68 10 536

Calibration adapter for transmitters with electrochemical DrägerSensors or catalytic bead sensors.



Splash Guard 68 12 510

Splash guard with counter nut to be connected to the Sensor ... DD. The response time is only marginally increased.
Material: PP (polypropylene).



Docking Station/ E-Box Power 68 12 420

Necessary for Enhanced Safety installations without relay/ remote function.



Cable Gland E -Box 68 12 868

Necessary Docking Station if relay and remote are required.



Duct Mount Kit Polytron 5000 68 12 725

Duct mount kit to mount directly onto the duct or pipe.



Calibration Bottle 68 03 407

Calibration bottle for DrägerSensors. Generates in combination with test gas ampoules a defined test gas concentration.



Test gas ampoule XX

To calibrate DrägerSensors with a defined gas concentration. Shall only be used with calibration bottle (6803407).
Many different versions are available please refer to the GDS sensor accessory list.



EC Sensing Head Remote w/ mount kit 68 12 684

For Remote Sensor installations with a max. cable length of 30 m.
Remote cable has to be ordered separately.



Remote Duct Adapter Polytron 7000 83 17 617

Remote duct mount kit to mount the remote sensor directly on the air duct or pipe.

For pipes or ducts with a round shape applicable if the diameter is minimum 100mm!



Accessories

Dräger Polytron 5100



Remote Cable + Plug (5m) 83 23 305

For each Remote Sensor one Remote cable is required. Connects the Remote Sensor to the Polytron 5100.



Remote Cable + Plug (15m) 83 23 315

For each Remote Sensor one Remote cable is required. Connects the Remote Sensor to the Polytron 5100.



Remote Cable + Plug (30m) 83 23 330

For each Remote Sensor one Remote cable is required. Connects the Remote Sensor to the Polytron 5100.




Process Adapter RS EC Stainless Steel 83 23 404

Special stainless steel flange for remote adapter applications. Optimized for the pharmacy or similar applications where hygiene is relevant. Remote sensor adapter 8317275 fits to this special adapter or the EC-Sensing Head 6812684 from the Polytron 8000. Made of X5CrNi18-10



Weathercap Set 37 02 198

The weathercap set provides additional protection for the Polytron. However, this can only be used with the d variant.

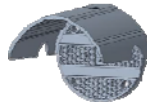

PolySoft Basic (one year license) 83 28 600

PolySoft Basic (unlimited – yearly fee) 83 28 601

For using the software a license code is required. One version activates the software without any time limit but only one year of free of charge updates and the other version activates the software as well without any time limit but unlimited updates as long as the yearly fee is paid. This keeps the PolySoft up to date for all existing transmitters and expansions for new products.

Universal GDS PC-software for configuration and calibration of PIA, Pulsar, Polytron 5xx0, Polytron 6100 EC WL, Polytron 7x00, Polytron 8xx0 and Dräger PIR 7x00.

The software provides failure diagnostic and documentation functionality.

The following interfaces are supported: HART, DIRA and ICom.



PolySoft Premium (one year license) 83 28 639

PolySoft Premium (unlimited – yearly fee) 83 28 640

For using the software a license code is required. One version activates the software without any time limit but only one year of free of charge updates and the other version activates the software as well without any time limit but unlimited updates as long as the yearly fee is paid. This keeps the PolySoft up to date for all existing transmitters and expansions for new products.

Universal GDS PC-software for configuration and calibration of PIA, Pulsar, Polytron 5xx0, Polytron 6100 EC WL, Polytron 7x00, Polytron 8xx0 and Dräger PIR 7x00.

The software provides failure diagnostic and documentation functionality and additionally allows the upload of SGI (single gas image) files to the Dräger PIR 7000.

The following interfaces are supported: HART, DIRA and ICom.

