


## Wet Chemical Extinguisher 6 liter AF Portable wet chemical extinguishers

Wet chemical extinguishers are the best restaurant kitchen appliance hand portable fire extinguishers you can purchase. Each model has been tested and approved for the Class K listing by UL specifically for restaurant kitchen hazards. They contain a special potassium acetate based agent. Wet chemical extinguishers cover type A and F fires.

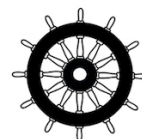

## Benefits

### Applications for the marine, inland shipping and offshore market

- kitchens
- accommodation rooms

The recent trend to more efficient cooking appliances and use of unsaturated cooking oils dictates the use of a hand portable fire extinguisher with greater fire fighting capacity and cooling effect to combat these very hot and difficult fires.

### Features

- all metal valve construction
- swivel connection on hose allows nozzle to be oriented for proper use
- nozzle grip design with 45° angle for easy "overhead" application
- low PH agent discharged as fine mist helps prevent grease splash and re-flash while cooling the appliance
- precise extinguishing agent application - no dry chemical to clean up
- excellent for use on all cooking appliances including solid fuel charbroilers
- tested on commercial deep fat fryers to ANSI / UL 711 test protocol and safe to use on Class C fires
- class 2A rated to meet fire code occupancy hazard requirements
- bar Coded and Bi-lingual Labels

## Accessories



### Cabinets

Cabinets are made of durable GRP or polyethylene material. The GRP cabinets are designed for tough offshore conditions, these cabinets are rated to IPX6 as certified by TÜV. The cabinets can be used for multi purposes such as storage of fire or safety equipment. The cabinets are deliverable in various sizes, with a green or red door.

## Accessories



### Brackets

Wall brackets for 2 till 12 kgs fire extinguishers. For all types of extinguishers: powder, foam, CO<sub>2</sub>, watermist and wet chemical foam.

## Technical Data

	<b>6 liter</b>
Manufacturer / Model	Amerex / B260
Extinguisher	Portable wet chemical extinguisher
Type	Stored pressure
Capacity	6 liter
Fire class / Rating	13A / 75F
Propellant gas	Nitrogen
Discharge time	53 seconds
Throw length	3 - 4 meters
Working pressure	6.9 bar
Suitable for electrical equipment	Up to 35 KV
Extinguishing agent	Potassium acetate solution
Temperature range	0°C to +60°C
Approx gross weight	9.6 kgs
Approx dispatch weight	10.6 kgs
Approx unit dimension	483 x 229 x 178 mm (l x w x h)
Color	Red
Approvals	CE, BS-EN3

## Ordering Information

<b>Description</b>	<b>IMPA no.</b>	<b>Articlenr.</b>
Amerex wet chemical extinguisher 6 liter AF (stored pressure)		SG00185
Cover for fire extinguisher with logo		SG00311
GRP storage cabinet: DMO-35		SG02030
Polyethylene fire extinguisher cabinet JBXF-83, red door		SG02432

### Service and support

Dräger offers 24/7 service and support, including full certification on all Dräger and non-Dräger products. Contact us for more details.

## Notes

## Notes

### **CORPORATE HEADQUARTERS**

Drägerwerk AG & Co. KGaA  
Moislinger Allee 53–55  
23558 Lübeck, Germany  
[www.draeger.com](http://www.draeger.com)

### **REGION DACH**

Dräger Safety AG & Co. KGaA  
Revalstraße 1  
23560 Lübeck, Germany  
Tel +49 451 882 0  
Fax +49 451 882 2080  
[info@draeger.com](mailto:info@draeger.com)

### **REGION EUROPE**

Dräger Safety AG & Co. KGaA  
Revalstraße 1  
23560 Lübeck, Germany  
Tel +49 451 882 0  
Fax +49 451 882 2080  
[info@draeger.com](mailto:info@draeger.com)

### **REGION MIDDLE EAST, AFRICA**

Dräger Safety AG & Co. KGaA  
Branch Office  
P.O. Box 505108  
Dubai, United Arab Emirates  
Tel +971 4 4294 600  
Fax +971 4 4294 699  
[contactuae@draeger.com](mailto:contactuae@draeger.com)

### **REGION ASIA PACIFIC**

Draeger Safety Asia Pte Ltd  
25 International Business Park  
#04-20/21 German Centre  
Singapore 609916  
Tel +65 6308 9400  
Fax +65 6308 9401  
[asia.pacific@draeger.com](mailto:asia.pacific@draeger.com)

### **REGION CENTRAL**

**AND SOUTH AMERICA**  
Dräger Panama S. de R.L.  
Complejo Business Park,  
V tower, 10th floor  
Panama City  
Tel +507 377 9100  
Fax +507 377 9130  
[contactcsa@draeger.com](mailto:contactcsa@draeger.com)

Locate your Regional Sales  
Representative at:  
[www.draeger.com/contact](http://www.draeger.com/contact)

