


Donning Poster Dräger PARAT® Hard Case



D-88029-2013

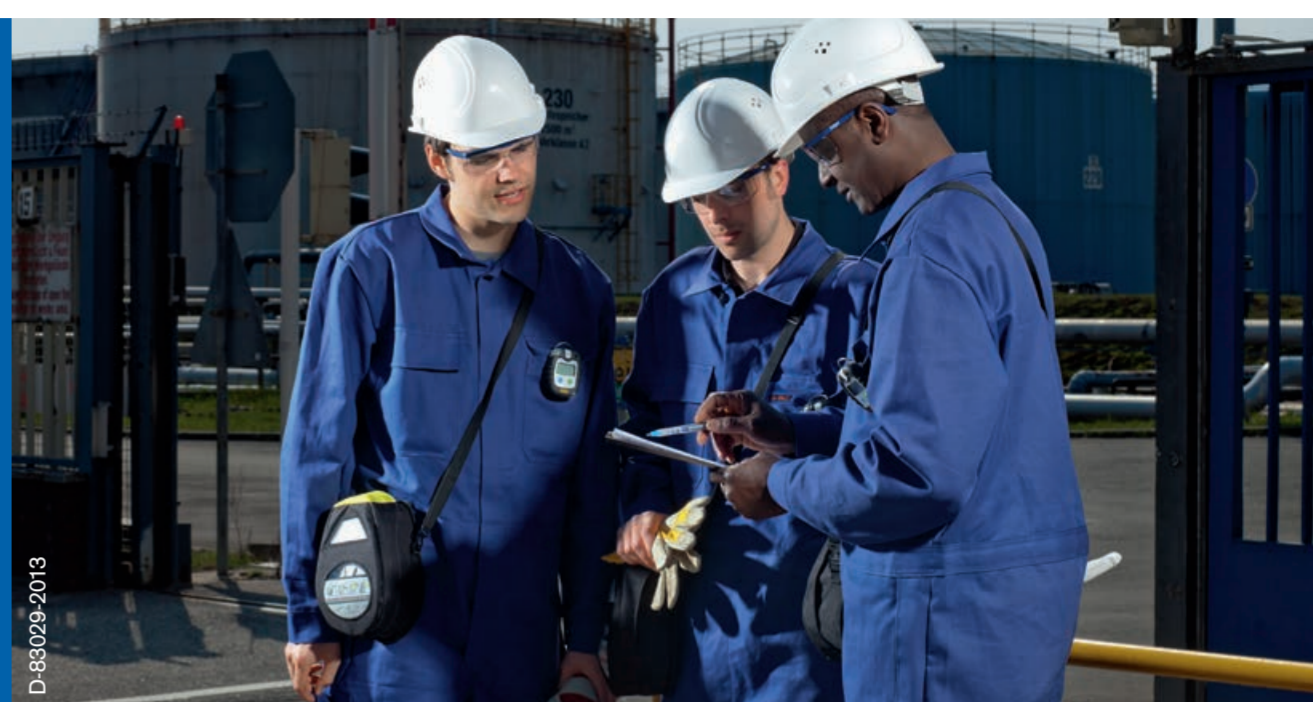

D-92788-2013

Dräger PARAT® Hard Case



D-84450-2013

Open the yellow handle. When opening, the security seal should break.



D-84460-2013

Open the Hard Case **completely**. The front filter sealing plug should be automatically removed.



D-84575-2013

Remove the hood from the Hard Case. Pull the hood against the fastening strap, it will automatically open. The second filter sealing plug will automatically be detached when the hood is removed.



D-84596-2013

Widen the neck seal and pull the hood over your head. The inner head harness automatically adjusts to your head. Ensure that nose and chin sit comfortably in the half mask and that all hair is tucked into the hood.



D-92897-2013

Check the fit of the half mask by closing the front filtering opening with the palm of your hand. If negative pressure is not generated readjust the half mask to ensure a close fit over nose and mouth.



D-84604-2013

Ready for use.

Always read and understand the instructions for use of the Dräger PARAT® escape device prior to use!