


Dräger Pulsar 7000 Series Detection of flammable gases and vapors

The Dräger Pulsar 7000 Series are stationary open path gas detectors. They detect explosive hydrocarbons in gases. The robust design and the extremely rapid response of the sensor make the Dräger Pulsar 7000 Series a dependable solution for your requirements in the oil and gas industry, as well as the chemical industry.

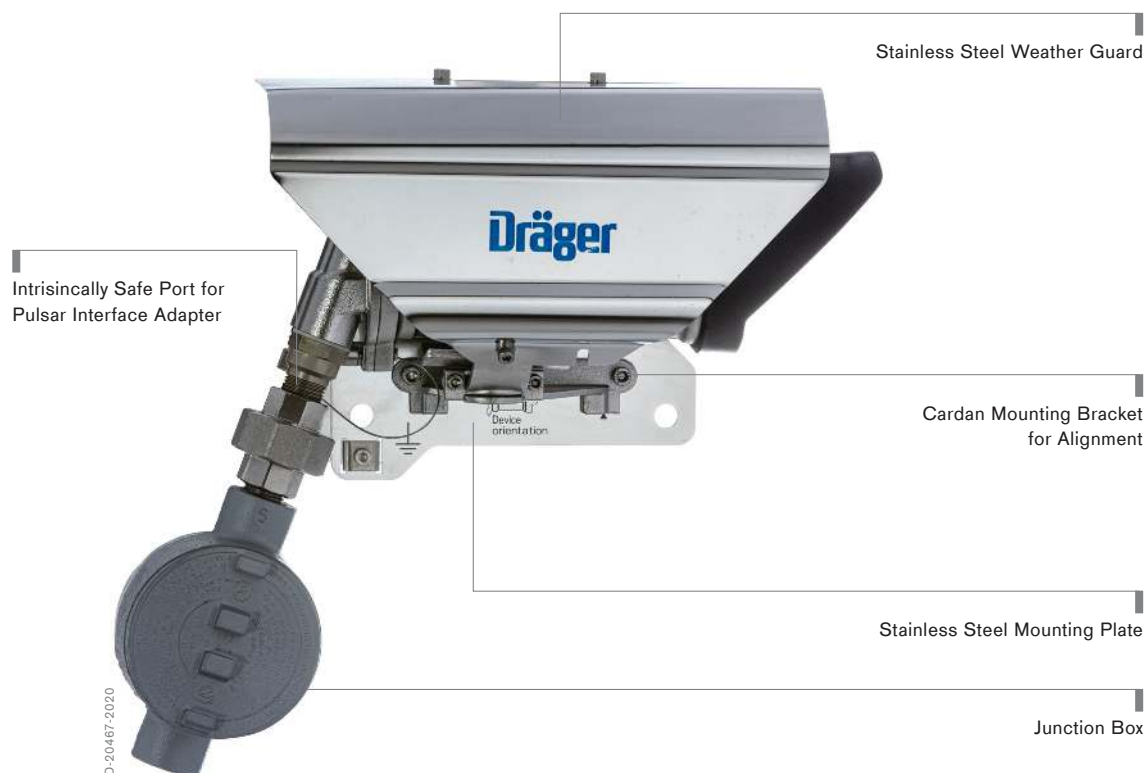

Benefits

Reliable and quick measuring

The Pulsar 7000 Series detects a wide range of gaseous hydrocarbons. These include methane, propane and ethylene. An accumulation of these gases in critical concentration can be measured at a distance of up to 200 metres within two seconds. To do this, the system enters a specific mode with increased frequency. Status LEDs in the transmitter and receiver indicate the operational readiness of the respective device even over a greater distance. The continuous self-monitoring of the Pulsar 7000 series offers additional security. If the signal strength is insufficient, due to dirty optics or other non-operationally critical impairments, a configurable alarm signal will be issued to indicate the need for maintenance. However, the system remains ready for use and can continue to detect gases. In addition to increased operational readiness, there is the benefit of being able to plan maintenance and avoid unexpected downtime. The Pulsar 7000 Series is suitable for safety-related applications up to SIL 2.

Reliable even in adverse weather conditions

With the Pulsar 7000, reliability is not at risk even when the weather is not ideal. For fog, mist, heavy rain or snow, the Pulsar 7000 Series has a mode with increased frame flash rate and light intensity. Thus, increased IR absorption caused by environmental factors is consented for. In addition, the heated optics prevent condensation or ice forming on the lens.

Easy to align, configure and commission

The alignment of the transmitter and receiver and the subsequent commissioning of the system can be easily done by a single person, without the need for an additional telescope or alignment mirror. After an initial rough alignment by eye, the exact alignment of transmitter and receiver is carried out using a handheld terminal. The alignment is displayed either in a coordinate system with target optics or in the form of numeric coordinates. The built-in calibration feature in the Pulsar 7000 Series does not require manual adjustment or test gas. After alignment, an automatic zero point adjustment starts, which completes the commissioning of the system. All parameters are stored and later used to detect misalignments or deposits on the lenses.

On site diagnostics

The handheld terminal can be used for predictive maintenance and on-the-spot troubleshooting. In addition to alignment and zeroing support, the handheld terminal also provides configuration and diagnostic features. Comprehensive diagnostics are possible with the PC software program Dräger PolySoft.

Documented security – protocol and integrated data

An integrated data logger stores the most recent errors, warnings and events. These include, for example, events such as blockages of the signal path, gas alarms, warning signals, or problems with the alignment or with the supply voltage. The data logger is supplemented by an hourly log of the values measured in this time.

Benefits

This includes essential data such as gas reading, signal strength and temperature, which are available for the last ten weeks of operation. Even after that, information is available as a weekly summary of the last ten years of operation.

The right model for any job

The Pulsar 7000 Series offers suitable models for the most diverse applications. The offshore models are equipped with stainless steel junction boxes and cable glands. This makes them particularly robust and able to withstand the harsh environmental conditions. You can use the cross-duct model to detect gas buildup in supply or exhaust ducts. The system is specially designed for shaft installations.

Accessories



D-7364-2016

Weather shield

The weather shield protects the system from adverse weather conditions such as snow and rain. Material: stainless steel 316L (incl. for each transmitter and receiver in the Dräger Pulsar 7000 Series)




D-17784-2017

PIA – Pulsar interface adapter

The Dräger Pulsar Interface Adapter (PIA) is a rugged, weatherproof unit that is certified for use in hazardous areas. The PIA offers two interfaces for communication with the Pulsar 7000 series via an intrinsically safe connection. It can be used in combination with a HART® handheld terminal or with a PC with PolySoft via the IR interface as protocol converter. This allows you to align and calibrate the transmitter and receiver of the Pulsar.

Services

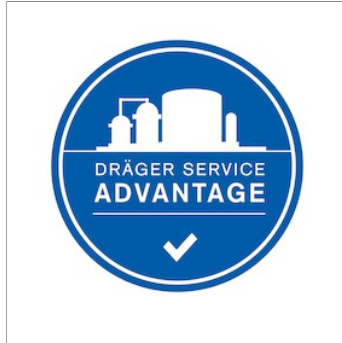

D-19074-2016

Dräger Service

Minimize risk and maximize your plant's safety and performance with Dräger service solutions. With service and rental options customized for your business operations, Dräger Services offer seamless support, less downtime, and more budget security. When your devices are serviced by the same team of experts that engineered them and are back by over 125 years of experience, you get complete peace of mind. That's the Dräger Service Advantage.

Related Products



D-6806-2016

Dräger REGARD® 7000

The Dräger REGARD® 7000 is a modular and highly expandable control system for monitoring various gases and vapors. Ideal for gas warning systems with various levels of complexity and numbers of transmitters, the Dräger REGARD® 7000 delivers exceptionally reliability and efficiency. An additional benefit is the controller's backward compatibility with the REGARD®.



D-14889-2010

Dräger Polytron® 8700 IR

The Dräger Polytron® 8700 IR is an advanced explosion proof transmitter for the detection of hydrocarbon gases in the lower explosion limit (LEL) and ppm. It uses a high performance infrared Dräger PIR 7000 sensor, which will quickly detect most common hydrocarbon gases. Besides a 3 wire 4 to 20 mA analog output with relays, it also offers HART®, Modbus and Fieldbus making it compatible with most control systems.

Technical Data

Type	Explosion-proof open-paths gas detector based on infrared absorption spectroscopy											
Gases	Wide range of hydrocarbons, including the alkane series from methane to hexane, propylene											
Measuring range	Min. 0 to 4 LEL m, max. 0 to 8 LEL m											
Gas category	IEC, NIOSH or PTB; selectable											
Factory calibration	Methane, propane or ethylene, selectable											
Operating range	4 to 60 m, 30 to 120 m or 100 to 200 m (distance between transmitter and receiver)											
Signal output	Analogue	<table border="1"> <tr> <td>Measuring</td> <td>4 to 20 mA (source and sink)</td> </tr> <tr> <td>Pre-warning</td> <td>3.5 mA (eg. dirty lens or misalignment), configurable</td> </tr> <tr> <td>Maintenance</td> <td>3 mA</td> </tr> <tr> <td>Beam block warning</td> <td>2 mA</td> </tr> <tr> <td>Faults</td> <td>< 1 mA</td> </tr> </table>	Measuring	4 to 20 mA (source and sink)	Pre-warning	3.5 mA (eg. dirty lens or misalignment), configurable	Maintenance	3 mA	Beam block warning	2 mA	Faults	< 1 mA
	Measuring	4 to 20 mA (source and sink)										
Pre-warning	3.5 mA (eg. dirty lens or misalignment), configurable											
Maintenance	3 mA											
Beam block warning	2 mA											
Faults	< 1 mA											
	Digital	HART® 7										
Power consumption	< 5 W receiver, < 9 W transmitter											
Operating voltage	18 to 32 VDC (24 VDC nominal)											
Response time t_{90}	< 2 s (under normal operating conditions when using the digital link)											
Skew tolerance	+/- 0.6°											
Ambient conditions	Temperature	-40 to + 60 °C, -40 to +140 °F										
	Pressure	800 to 1,100 hPa										
	Air humidity	0 to 100% rel. humidity, non-condensing										
Housing	Material	Stainless steel AISI 316L "Marine Grade"										
	Protection class	IP66/IP67										
	Weight (approx.)	9 kg (19.84 lbs), each transmitter and receiver incl. backplate and weather shield										
Approvals		Tamb = -55 °C to +40 °C/+60 °C*										
	Performance approval	FM Class 6325 ANSI/ISA-12.13.04										
	Safety Integrity Level	SIL 2 SC3 Certification by TÜV Nord (EN 61508)										
	CSA	Class I, Div. 1, Groups C & D, T6..T5 Class II, Div. 1, Groups E, F & G Ex db [ia Ga] IIC T6..T5 Gb Class I, Zone 1, AEx db [ia Ga] IIC T6..T5 Gb Ex tb [ia Da] IIIC T80°C/ T95°C Db Zone 21, AEx tb [ia Da] IIIC T80°C/ T95°C Db Type 4X, IP 66/67										
* -40 °C for Heavy Duty/Offshore model												
HART® is a registered trademark of the HART® Communication Foundation												

Ordering Information

Dräger Pulsar 7000 Complete Set

Pulsar 7000 Short Range 4m – 60m (13ft – 196ft)	NA 10340
Pulsar 7000 Medium Range 30m – 120m (98ft – 393ft)	NA 10341
Pulsar 7000 Long Range 100m – 200m (328ft – 656ft)	NA 10342
Pulsar 7000 Short Range 4m – 60m (13ft – 196ft)	NA 10343
Ethylene	

Ordering Information

Pulsar 7000 Medium Range 30m – 120m (98ft – 393ft) NA 10344
Ethylene

Dräger Pulsar 7000

Dräger Pulsar 7000 TX S Range	68 51 728
Dräger Pulsar 7000 TX L Range	68 51 729
Dräger Pulsar 7900 RX S Range Ethylene	68 51 732
Dräger Pulsar 7700 RX S Range	68 51 733
Dräger Pulsar 7700 RX L Range	68 51 734

Both TX & RX will come with a mounting plate and a weather shield.

Duct Mount

Dräger Pulsar 7700 Duct Mount Complete (TX & RX)	68 51 739
Dräger Pulsar 7000 Duct Mount TX	68 51 730
Dräger Pulsar 7700 Duct Mount RX	68 51 731

Mounting Parts

2" / 50mm Pipe mount kit	23 07 003
Pulsar 7000 duct wall mounting plate kit	23 50 450

Communication & Maintenance

Pulsar Interface Adapter (PIA), single unit	68 51 565
Pulsar Interface Adapter set for Standard variant	68 51 630
Pulsar Interface Adapter set for Ethylene variant	68 51 631
Pulsar Interface Adapter set for Duct Mount	68 51 632
Lens cleaning fluid LCF01	23 50 291

Calibration Kits

Gas test sheets for Dräger Pulsar 7900 (Ethylene)	23 50 520
Gas test sheets for Dräger Pulsar 7700 (Methane/Propane)	23 50 521
Gas test sheets for Dräger Pulsar 7700 Duct Mount	23 50 451
Gas cell kit, single pass (Propane)	23 50 514
Gas cell kit, single pass (Methane)	23 50 516
Gas cell kit, single pass (Methane and Propane)	23 50 518

Notes

Notes

Not all products, features, or services are for sale in all countries.
Mentioned Trademarks are only registered in certain countries and not necessarily in the country in which this material is released. Go to www.draeger.com/trademarks to find the current status.

CORPORATE HEADQUARTERS

Drägerwerk AG & Co. KGaA
Moislinger Allee 53–55
23558 Lübeck, Germany
www.draeger.com

USA

Draeger, Inc.
7256 S. Sam Houston Parkway W.,
Suite 100
Houston, TX 77085
1 800 4DRAGER
(1 800 437 2437)

CANADA

Draeger Safety Canada, Ltd.
2425 Skymark Ave., Unit 1
Mississauga, Ontario L4W 4Y6
1 877 DRAGER1
(1 877 372 4371)

Locate your Regional
Sales Representative at:
www.draeger.com/contact

